Recommended setup for 2-channel analog usage

| Digital Audio Ou | $\begin{array}{c} \text{it} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | Dolby Digital Out DTS Out Linear PCM Out MPEG Out | $\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | Dolby Digital DTS Out Down Sample Off MPEG > PCM |
|------------------|---|---|--|---|
| Video Output | $\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | TV Screen Component Out AV Connector S-Video Out Still Picture | $\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | 16:9 (Wide) progressive RGB S2 Auto |
| Language | $ \begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array} $ | Audio Language Subtitle Language Auto Language Subtitle Display | $ \begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array} $ | English English On off |
| Display | $\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | OSD Language On Screen Display Angle Indicator Backgoround Screen Saver | $\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | English On On Logo Off |
| Options | $\uparrow \uparrow \uparrow \uparrow \uparrow \uparrow \uparrow \uparrow \uparrow \uparrow \uparrow$ | Parental Lock Bonus Group Auto Disc Menu Group Playback DVD Playback Mode SACD Playback HDMI Settings CD Playback DTS Downmix | $\begin{array}{c} \uparrow \\ \uparrow $ | Off On Single DVD-Audio 2-ch Area PCM Playback Stereo |
| Speakers | $ \begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array} $ | Audio Out Speaker Installation Speaker Distances Channel Level | $\begin{array}{c} \rightarrow \\ \rightarrow \\ \rightarrow \\ \rightarrow \end{array}$ | 2-ch Fix |

ß

Note:

Additional settings for best sound quality of 2-channel analog usage:

- If available, select 2-channel audio track on DVD-Video or DVD-Audio disks.
- In case you listen to music only, use switch 4 on the back panel of the VIP G2 to shut down the video section (switch position **off**).
- Put switch 11 in position **H bit** to activate the HighBit Mode (even if you are using the analog outputs only!).